




VOLATILE**FREE** INC

Air Driven Tools Operating Instructions

CARTRIDGE LOADING

Two Component Applicators with cartridge locators

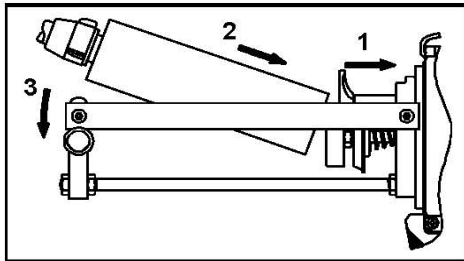

1. Ensure rods are fully retracted towards the barrel.
2. Locate rear of cartridge over plungers and onto cartridge locators.
3. Push back firmly until the front of the cartridge can be located into the frame assembly.
4. Check that the cartridge is correctly located before operating the trigger.

Corporate Office: P.O. Box 344 - Brookfield, WI 53008 - (800) 307-9218 - (262) 787-0400 - Fax (262) 787-0500

This information and technical advice provided herein are believed to be reliable and accurate to the best knowledge of Volatile Free, Inc., as based on tests and should serve only as a recommendation. As the manufacturer, Volatile Free, Inc. makes no representations or warranties of any kind, expressed or implied, including but not limited to all implied warranties of merchantability or fitness for use or a particular purpose for the product. Volatile Free, Inc. makes no representations or warranties as to the results of the use of the product and assumes no obligation or liability in connection therewith. Volatile Free, Inc. is not liable for any incidental or consequential damages of any sort from use of this product. The information provided herein is subject to change at anytime without notice. Information changes may include, but are not limited to, commercial and technical changes, changes in pricing, physical characteristics and packaging.